


## Toyota 200 series original camera adapter

Figure 1

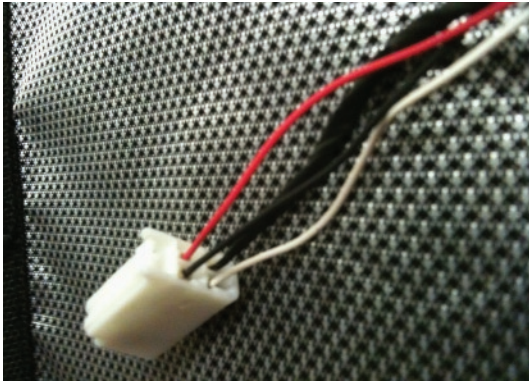

### Step 1:

After removing the original Toyota radio, locate the Grey coloured camera lead with the white four pin connector, normally towards the passengers side of radio cavity. (Figure 1)

Figure 2



### Step 2:

Plug in the VMS Toyota OE camera adapter lead PN P0501-0020 (Figure 2)


Figure 3



### Step 3:

Plug the red cable from the camera adapter lead into the blue VMS Power lead marked "Back". Then connect the black cable to the spare ground wire from the VMS power lead. (Figure 3)

Figure 4

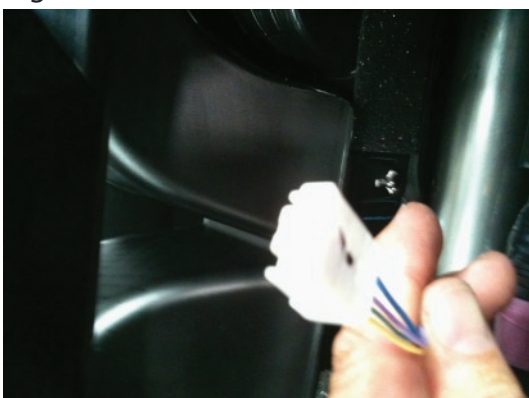

### Step 4:

Locate the four pin connector with Blue Purple Green and yellow wires originating from the main Toyota loom at the rear of radio cavity as shown. (Figure 4)

Connect the red untethered cable from the camera adapter lead to the blue 12 volt reverse wire located on the 4 pin connector as seen in Figure 4. The Handbrake switch can also be obtain from the yellow wire in the same connector.

### Step 5:

Plug the yellow RCA connector from camera adapter lead into camera in RCA.